
Box: PLOCK 1			FITTING INSTRUCTIONS 1
BIKE	SUZUKI GSF 600 / 650 / 1200 BANDIT. CARBINE	PART NO.	ESI - 90
YEAR	2000 - 2006	FIT KITS	OVAL Z039.11081
NOTES	Where not supplied use original fittings	FEATURES	DB KILLER Z038.10120

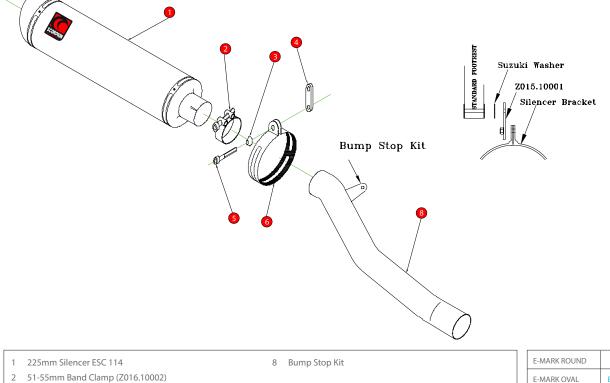

- 3 Alloy Bolt Finisher (Z026.20068)
- 4 Mounting Bracket (Z015.10001)
- 5 M8 x 16mm Cap Head Bolt (Z017.10808)
- Composite Silencer Strap (O-Z038.10088) б
- Connecting Pipe CP33 7

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



E-MARK ROUND	
E-MARK OVAL	BSAU 193a 1990/t3
ISSUE NO.	8
DATE	19/12/08
AUTHORISED	S.Northrop
CHECKED	

A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

