
Box: PLOCK 1]		FITTING INSTRUCTIONS 1
BIKE	SUZUKI GSF 650 BANDIT	PART NO.	ESI - 98
YEAR	2007 - 11	FIT KITS	OVAL Z039.11264 // ROUND Z039.10264
NOTES	Use standard fittings where not supplied	FEATURES	DB KILLER Z038.10120

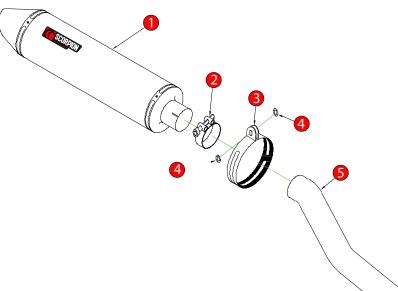

	O	
	E-MARK ROUND	SI-96 e4 2294 (9)
	E-MARK OVAL	SI-96 e4 2294 (9)
	ISSUE NO.	6
	DATE	19/12/06
	AUTHORISED	S.Northrop

6

CHECKED

- 1 450mm Silencer ESC 110
- 2 51 55mm Band Clamp (Z016.10002)
- 3 Composite Silencer Strap (R-Z038.10090)(O-Z038.10088)
- 4 2 x M8 x 25mm Washers (Z017.10825)
- 5 Connecting Pipe CP 431
- 6 55-59mm Band Clamp (Z016.10004)
- 7 Bump Stop Kit

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

