
Roy:	PI	OCK	1

•	•		
BIKE	YAMAHA YZF 600 R6	PART NO.	EYA - 73
YEAR	2006 - Current	FIT KITS	OVAL Z039.11194
NOTES	Where not supplied use original fittings	FEATURES	DB KILLER Z038.10127

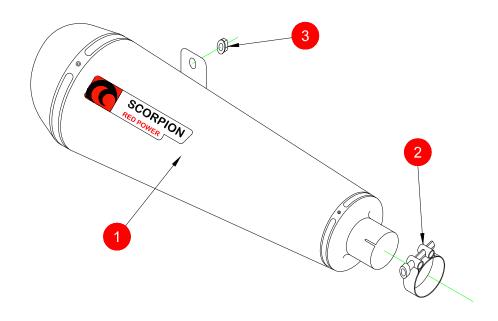

- 1 275mm Silencer ESC 86
- 2 47-51mm Band Clamp (Z016.10003)
- 3 M8 Nyloc Nut (Z017.10062)
- 4 100mm Cable Tie (Z017.10062)
- 5 Photo Fitting Instructions

E-MARK ROUND	N/A	
E-MARK OVAL	SC-86 e4 2217	
ISSUE NO.	7	
DATE	14/08/14	
AUTHORISED	T.Rowley	
CHECKED		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



Fitting instructions follow on next page.





BIKE	YAMAHA YZF 600 R6	PART NO.	EYA - 73
YEAR	2006 - Current	FIT KITS	OVAL Z039.11194
NOTES	Where not supplied use original fittings	FEATURES	DB KILLER Z038.10127

CONTINUED FROM OVERLEAF:





- A) Remove lower fairing bolt to aid access to OE silencer clamp
- B) Remove the three bolts shown to expose the exup valve & cables
- C) Disconnect the cables by unscrewing the adjusting nuts & lift the nipples out of the wheel

You can now remove the OE silencer by removing the clamp & top hanging bolt





- D) Before fitting the Scorpion silencer, use the cable-tie to safely attach the loose cables to the lambda sensor wire & trim the cable-tie.
- E) Now remove the O.E flare and gasket from the exhaust so Scorpion product can fit the O.E.
- F) Fit the Scorpion silencer with the new clamp & OE bolt and fasten securely with the Nyloc nut, then tighten the clamp.





Ensure all cables and any fitments are secured safely and all original functions work correctly prior to use.

